

Quick Start - Graphic Button Overview

Your ScanPro 1000 uses graphic buttons to control the features of the scanner. This is a quick overview to get you started. You can find additional information in the operator's manual that installs from the installation CD. Locate the manual from the START MENU: START> PROGRAMS> POWERSCAN> ScanPro 1000 Operators Manual.



FILM TYPE CLICK to select the FILM TYPE to match the film you will be scanning. POSITIVE (black text on clear background) or NEGATIVE (clear text on black/blue background).




SCAN CLICK to Scan to Drive #2.



FILM ORIENTATION CLICK to match your scanner to the FILM IMAGE ORIENTATION Horizontal if the image on your film is wider than it is high (BUTTON icon shown). Vertical if the image on your film is higher than it is wide.



PRINT CLICK to Print.

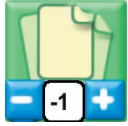

ROTATE OPTICAL Optical Image Rotation. Use the or BUTTONS to ROTATE, "JOG", the image.



SAVE SETTINGS CLICK to Name and Save current settings.




ROTATE DIGITAL CLICK to rotate the image in increments of 90°.



RESTORE SETTINGS CLICK to Select and Restore saved setting.



ZOOM CLICK and HOLD DOWN on the or BUTTONS to ZOOM the entire microfilm image.

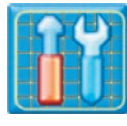

SETUP WINDOW (requires password) SETUP WINDOW selections: which BUTTONS appear on the monitor, Scan to Drive #1 location, Scan to Drive #2 location, scan Prefix, scan file Format, HIDE/SHOW the Roll Film Control, unit of measure, HIDE/SHOW Save As, SPECIFY Fit to Page Size, ENABLE/DISABLE Print Offset.



MIRROR CLICK to "mirror" the image.

MOTORIZED ROLL FILM CONTROL



BRIGHTNESS CLICK the BUTTON for auto brightness. Use the and BUTTONS to manually adjust brightness. When Auto Brightness is active, the value in the BUTTON WINDOW is "Gray".


CLICK and drag the button for low speed film movement. CLICK and hold the and buttons for fast speed film movement (speed doubles when the film carrier is pulled all the way forward). DOUBLE CLICK the button for fast speed film rewind (requires that the film carrier is pulled all the way forward).



CONTRAST Use the and BUTTONS to manually adjust contrast.



FOCUS CLICK the BUTTON to make Auto Focus active. Use the and BUTTONS to Manually Focus.

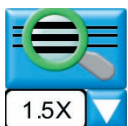


MAGNIFIER CLICK the BUTTON to open the Magnifier Window. CLICK the BUTTON to select the magnification value.




RESOLUTION CLICK the BUTTON to select the scan resolution.



SCAN TYPE CLICK to "toggle" between GRAYSCALE scanning and HALF TONE scanning . In GRAYSCALE, CLICK the check box to "toggle" between ENHANCE on and ENHANCE off .

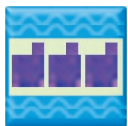

LIVE CLICK and leave the mouse pointer on the BUTTON to maintain a LIVE image.

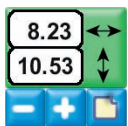

SCAN SIZE Use the and BUTTONS to manually re-size the Scanned Image. CLICK the FIT-TO-PAGE BUTTON to automatically re-size the scan to the Fit to Page Size. When FIT-TO-PAGE is active, the dimensions shown on the BUTTON WINDOW are "Gray".



SCAN CLICK to Scan to Drive #1.